


Frequency metering with 2 setpoints - microprocessor based technology


- Free scalable indication and setpoints from 0 up to +9999
- Standard: min/max memory, sensor supply - Option: analogue output
- Mounting into panels with thickness up to 50 mm

96x24

8888

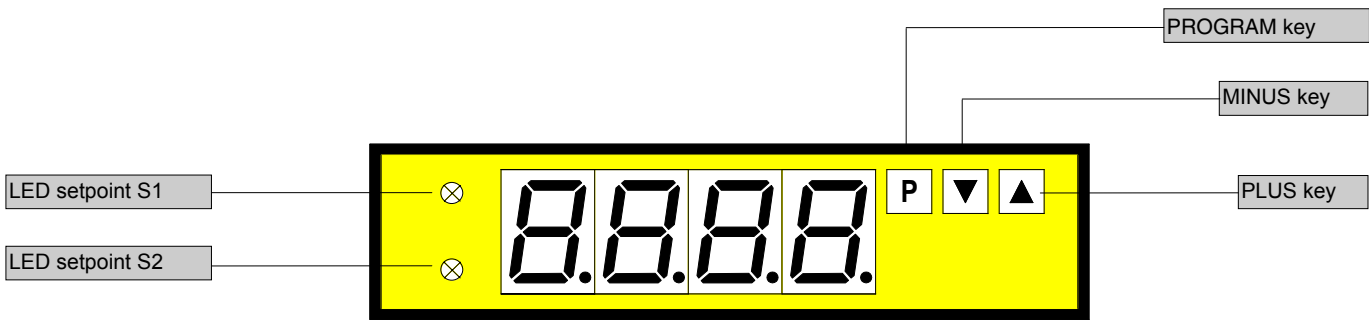

ORDER NUMBER OF TYPE
PFE 4.307.3522B

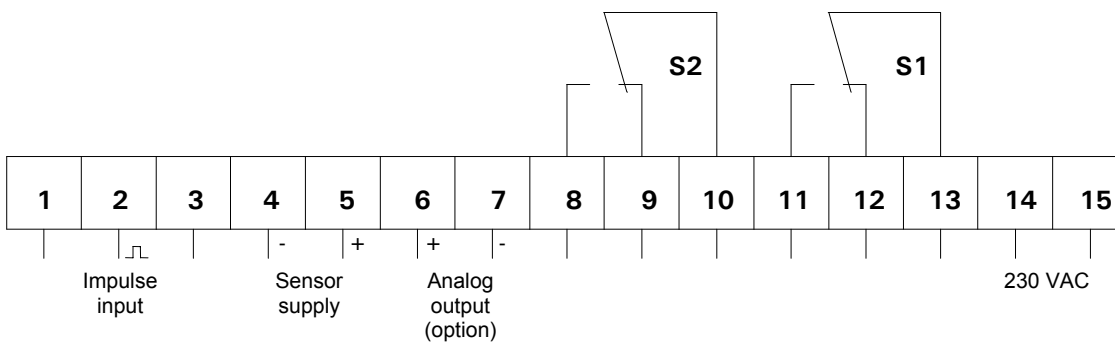

Connections for Namur and 3-wire NPN and PNP see last page.

Power supply 115 VAC
(connection via terminal 14 and 15)

PFE 4.307.3422B

Power supply 24 VDC
- galvanic insulated - (15=plus, 14= minus)

PFE 4.307.3722B

Options

- green LED
- Protection IP54
- Plug in terminal with protection IP40
- Plug in terminal with protection IP54
- Sensor supply 10 VDC/20 mA
- Sensor supply 10 VDC/20 mA (supply voltage 24 VDC galvanic insulated)


The sensor supply is galv. insulated from the measuring input!

- Analog output 0-10 VDC (12 bit)
- Analog output 0-20 mA/load 500 Ω (12 bit)
- Analog output 4-20 mA/load 500 Ω (12 bit)
- Analog output 0-10 VDC (12 bit) (supply voltage 24 VDC galvanic insulated)
- Analog output 0-20 mA/load 500 Ω (12 bit) (supply voltage 24 VDC galvanic insulated)
- Analog output 4-20 mA/load 500 Ω (12 bit) (supply voltage 24 VDC galvanic insulated)
- Other power supplies on demand

Technical data

Dimensions	Housing	96 x 24 x 131 mm, including screw terminal
	Assembly cut out	92.0 ^{+0.8} x 22.0 ^{+0.6} mm
	Fastening	special quick plastic clamp proper to fix in wall thickness up to 50 mm
	Housing material	PC/ABS-plastic blend, colour black, UL94V-0
	Protective system	at the front IP40 connection IP00
	Weight	approx. 0.290 kg
	Connection	at the rear side via screw terminals up to 2.5 mm ²
Input	Sensors	Namur, 3-wire pick up, impulse input High/Low Level ---> 10 V / < 6 V – U _{in} max. 30 V
	Input resistance	R _i at 10 V ≥ 55 kΩ; at 20 V ≥ 2.5 kΩ; at 30 V ≥ 1.5 kΩ
	Input frequency	1 Hz up to 500 KHz (option 0.01 Hz – 1 Hz)
Output	Sensor supply	24 VDC/50 mA – 10 VDC/20 mA (other sensor supplies/performances on demand) The sensor supply is galvanically insulated from the measuring input!
	Relay output	charge 240 VAC/0.25 A – 24 VDC/1 A, with ohm resistive burden
	Switching cycles	2 * 10 ⁵ at max. contact rating 10 * 10 ⁶ mechanically
	Analogue output	0-10 VDC (12 bit) 0-20 mA (12 bit) - load 500 Ohm 4-20 mA (12 bit) - load 500 Ohm
		} The analogue output is galvanic insulated from the measuring input!
Accuracy	Resolution	0 up to +9999
	Measuring fault	+/-0.04% of the input frequency
	Measuring principle	frequency/pulse width measuring
	Temp. Drift	40 ppm/K
Power unit	Supply voltage	230/115 VAC +/- 10 % (50-60 Hz), 24 VDC (+/-10 % galvanic insulated)
	Power consumption	approx. 5 VA
Indication	Display	LED with 7 segments, 14 mm high, red 4-digit = indication 9999
	Overflow	indication of four transversal bars
	Indication time	from 0.2 up to 10.0 seconds adjustable
Ambient conditions	Working temperature	0 up to + 60 °C
	Storing temperature	-20 up to + 80 °C


Housing:

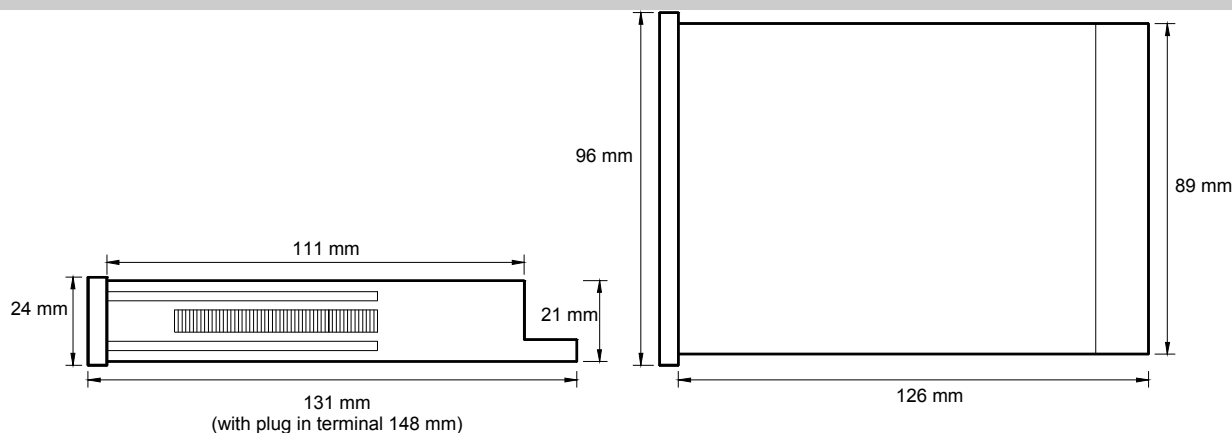

CE-sign

For unlimited use of the instrument within the directives for electromagnetic compatibility 89/336/EC frequency input wires have to be used with shielded cable and cable's shield connected to earth ground at one end only.

Connection diagram, programming, remarks

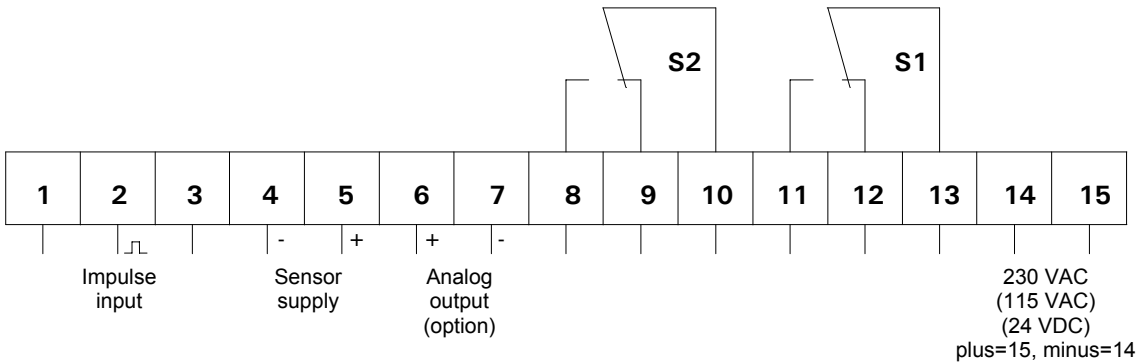

Setting

1. Connect the instrument according to the wiring diagram.
2. Detach front pane with a small screw driver leading between front pane and housing.
3. After power on, the instrument runs into a lamp test and returns back to the standard mode.
4. Connect the desired input frequency to the measuring input.
5. Pressing the **P**-key enters the programm-mode with indication of „P1“ on the display.
6. Pressing the **P** und **▲** key simultaneously steps through the different programm numbers.
7. Pressing **▲** oder **▼** key shows the current values.
8. To change values use **▲** oder **▼** key.
9. Otherwise the remaining values will be memorized automatically 7 seconds after the last touch of key with leaving program mode.

Additional key-functions in standard mode for indication of min/max values.

Simultaneously pressing of **▼** and **▲** key deletes and actualizes min/max-memory.
▲ key enters max-memory.
▼ key enters min-memory.


Instructions

After power on the instrument with the inbuilt microcontroller starts with an initial program activating lamp test and readout of memorized parameters in an EEPROM. In case of losing parameters or any defects in hardware the system generates an error message „HELP“. This function prevents damage from the peripherals and human life, totally reset is required. After a new power on, the system remains in lamp test while pressing **P**-key. Then the unit storages the default parameters and is ready for a new programming.


Setpoints

The following diagrams are showing the switching operation of PFE4 relay contacts. The hysteresis is free programmable. There are two kinds of operation:

Example: operation current

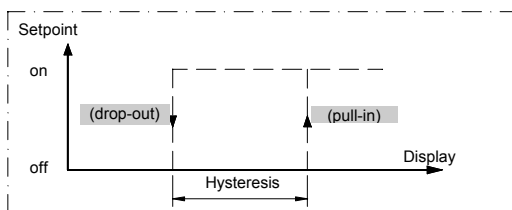

Example: quiescent current

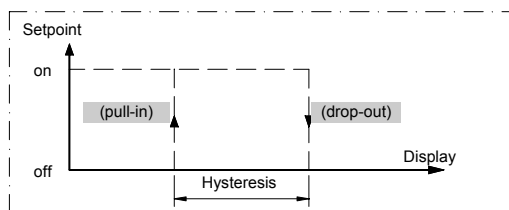

Operation current means that the relay contact will be pulled in if reaching the adjusted setpoint.

Quiescent current means that the relay contact will be dropped out if reaching the adjusted setpoint.

Program table, example of programming

Subject to technical alteration – status 03/2006 - PFE473GB.DOC

Program table 1


Program-Number (PN)	Function	Remark	Display	Basic parameter after reset
1	Input of desired indication value		0 up to +9999	1000
2	Setting of decimal point	Press ▲ until desired decimal point will be shown.		no decimal point
3	Setting of input frequency	Setting in Khz, decimal point unconsidered.		1.000
4	Setting of decimal point for input frequency	(Minimum one decimal point is necessary) Press ▲ until desired decimal point will be shown		decimal point on first digit
5	Input of final value for analog output	Option	0 up to +9999	1000
6	Input of offset for analog output	Option	0 up to +9999	0
8	Input of display time		0.2 up to 10.0 s	1.0

Program table 2 (setpoints)

S1	S2	Function	Display	Basic parameter after reset
PN	PN			
61	66	Setpoint	0 up to +9999	500 / 600
62	67	Hysteresis	0 up to +9999	1
63	68	Quiescent current	0	-
		Operating current	1	1

Example for programming

Input: frequency
Measuring value: 0 - 85 KHz
Indication: 0 Hz = 0.0 85.00 KHz=300.0
Display refres. time: 2.0 seconds
Setpoints: S1 ==> 60.0 and quiescent current
 relay pull in = 58.0 ==>hysteresis of 2.0
 S2 ==> 150.0 and operating current
 relay drop out= 80.0 ==>hysteresis of 70.0
Analog output: 0 V output ==> display 0.0 ==> measuring value 0 Hz
 10 V output ==> display 300.0 ==> measuring value 85.00 KHz

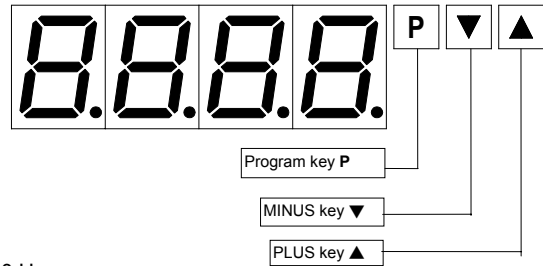

The basic adjustments concerning to the following program example are the ground parameters after a total reset occurring through a power on with pressing **P**-key (see previous page).

Program advices

Pressing the **P**-key enters **always** the program mode with program number 1. The „P1“ begins to blink in change with the current value after 3 seconds. Further 4 seconds, the system leaves the program mode and goes to the standard mode. In Program mode pressing ▼ or ▲ key selects the current values which are free scalable with both the keys. All parameters will be memorized automatically after leaving program mode.

Programming.

Switch power on!

Lamp test

8.8.8.8

Standard mode

0

Enter program mode

P 1 P

To memorized value with ▼ or ▲
1000

Set free scalable value
3000

To program number 2 with P and ▲
P 2

To memorized value with ▼ or ▲
0

Set decimal point

0.0

To program number 3 with P and ▲

P 3 P

To memorized value with ▼ or ▲

1.000

Example for programming

Set the free scalable input frequency in kHz. Decimal point unconsidered

8.500

To program number 4 with P and ▲

P 4

To memorized value with ▼ or ▲

8.500

Set decimal point

8500

To program number 8 with P and ▲

P 8

To memorized value with ▼ or ▲

10

Set display time

2.0

The following programming steps are necessary for setpoint programming of S1 and S2 only.

To program number 61 with P and ▲

P 61

To memorized value with ▼ or ▲

50.0

Set free scalable value of setpoint S1.

60.0

To program number 62 with P and ▲

P 62

To memorized value with ▼ or ▲

0.1

Set hysteresis of S1.

2.0

To program number 63 with P and ▲

P 63

To memorized value with ▼ or ▲

1

Set quiescent current.

0

To program number 66 with P and ▲

P 66

To memorized value with ▼ or ▲

60.0

Set free scalable value of setpoint S2.

150.0

To program number 67 with P and ▲

P 67

To memorized value with ▼ or ▲

0.1

Set hysteresis of S2.

70.0

To program number 68 with P and ▲

P 68

To memorized value with ▼ or ▲

1

Programming finished.

All programmed values will be memorized after 7 seconds. Jumps back into standard mode automatically.

The program numbers 5 and 6 are available with option analogue output only.

To program number 5 with P and ▲

P 5

To memorized value with ▼ or ▲

2000

Set free scalable final indication value for analog output.

3000

To program number 6 with P and ▲

P 6


To memorized value with ▼ or ▲

0.0

Programming finished.

All programmed values will be memorized after 7 seconds. Jumps back into standard mode automatically.


Setting possibilities of the jumper field on the rear side.

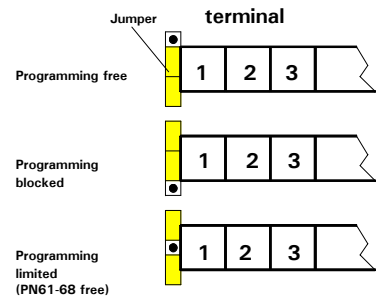


Connection diagrams

Terminal holding for different sensors


Namur

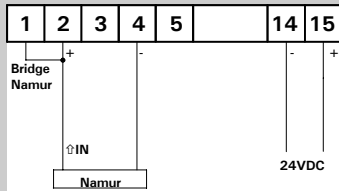


Namur

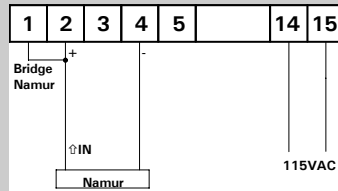


Namur

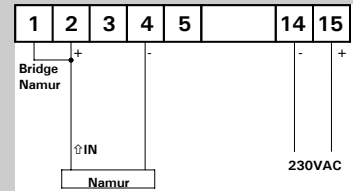


3-wire NPN

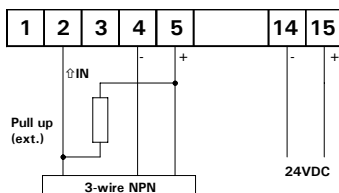


3-wire NPN

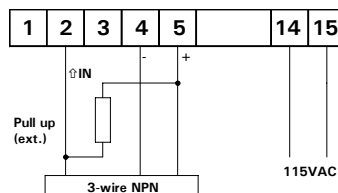


3-wire NPN

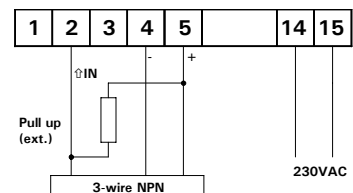

3-wire PNP

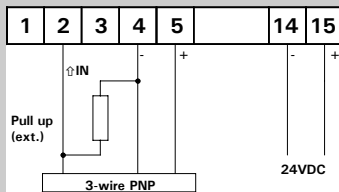

3-wire PNP

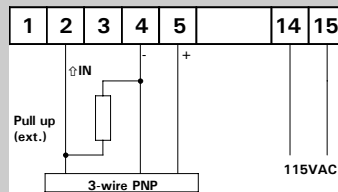

3-wire PNP

