
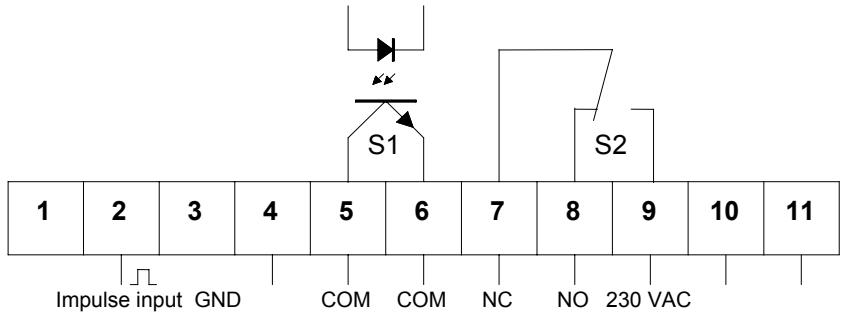



# Frequency metering with 2 setpoints - microprocessor based technology

- Free scalable indication and setpoints from 0 up to +9999
- Standard: min/max memory - optional analogue output
- Mounting into panels with thickness up to 50 mm

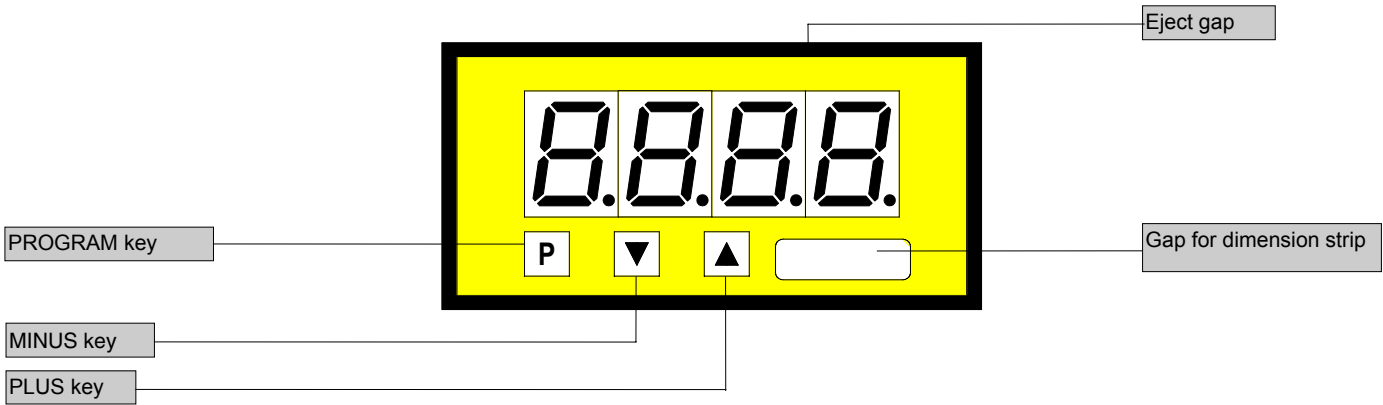

ORDER NUMBER OF TYPE  
**PFE 4.007.6522B**

Connections for Namur and 3-wire NPN and PNP see last page. (24 VDC externally necessary!)

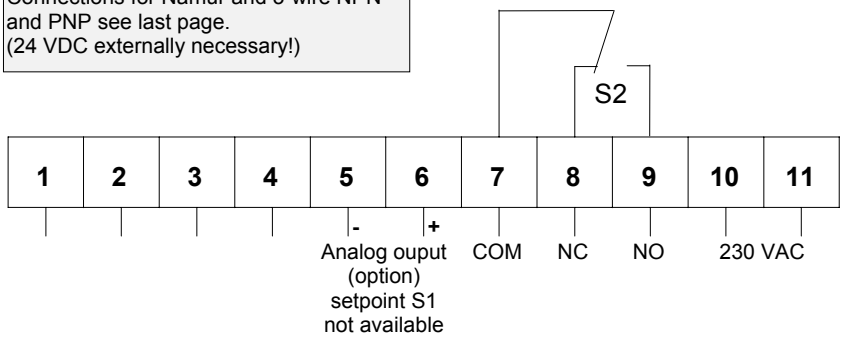

Power supply 115 VAC  
(connection via terminal 10 and 11)

**PFE 4.007.6422B**

Power supply 24 VDC  
- **galv. insulated** - (11=plus, 10= minus)

**PFE 4.007.6722B**

## Options

- green LED
- Protection IP54
- Protection IP65
- Plug in terminal with protection IP40
- Plug in terminal with protection IP54
- Plug in terminal with protection IP65
- Analog output 0-10 VDC
- Analog output 0-20 mA/load 500 Ω
- Analog output 4-20 mA/load 500 Ω
- Analog output 0-10 VDC (Power supply 24 VDC galvanically insulated)
- Analog output 0-20 mA/load 500 Ω (Power supply 24 VDC galvanically insulated)
- Analog output 4-20 mA/load 500 Ω (Power supply 24 VDC galvanically insulated)


**With analog output there is no setpoint S1!**

- Dimension strip selectable (7 characters max.)
- Other power supplies on demand
- Other impuls inputs on demand (TTL, CMOS, etc)

# Technical data

<b>Dimensions</b>	Housing	72 x 36 x 97 mm, including screw terminal
	Assembly cut out	68.0 <sup>+0.7</sup> x 33.0 <sup>+0.6</sup> mm
	Fastening	special quick plastic clamp proper to fix in wall thickness up to 50 mm
	Housing material	PC/ABS-plastics blend, colour black, UL94V-0
	Protective system	at the front IP40
	Weight	approx. 0.190 kg
	Connection	at the rear side via terminals up to 2.5 mm <sup>2</sup>
<b>Input</b>	Sensors	Namur, 3-wire pick up, impulse input High/low level ---> 10 V / < 6 V
	Input resistance	Ri at 10 V = 10 KΩ
	Input frequency	1 Hz up to 500 KHz (option 0.01 Hz – 1 Hz)
<b>Output</b>	Relay output	charge 240 VAC/0.25 A – 24 VDC/1 A, with ohm resistive burden
	Switching cycles	2 * 10 <sup>5</sup> at max. contact rating 10 * 10 <sup>6</sup> mechanically
	Open collector	Supply by customers (U <sub>B</sub> =5-40 V/I <sub>max</sub> =100 mA)
	Analogue output	0-10 VDC (12 bit) 0-20 mA (12 bit) - load 500 Ohm 4-20 mA (12 bit) - load 500 Ohm
		} The analogue output is galvanic insulated from the measuring input!
<b>Accuracy</b>	Resolution	0 up to +9999
	Measuring fault	+/-0.04 % of the input frequency
	Measuring principle	frequency/pulse width measuring
	Temp. Drift	40 ppm/K
<b>Power unit</b>	Supply voltage	230/115 VAC +/- 10 % (50-60 Hz), 24 VDC +/-10 % galvanic insulated
	Power consumption	approx. 3 VA
<b>Indication</b>	Display	LED with 7 segments, 14 mm high, red 4-digit = indication 9999
	Overflow	indication of four transversal bars
	Indication time	from 0.2 up to 10.0 seconds adjustable
<b>Ambient conditions</b>	Working temperature	0 up to + 60 °C
	Storing temperature	-20 up to + 80 °C


## Housing:

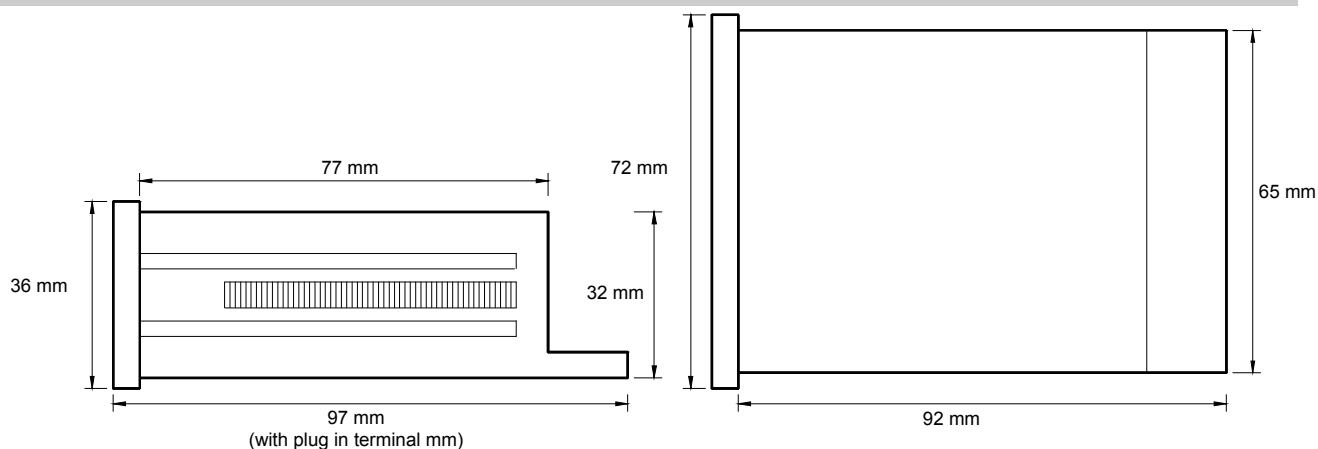

### CE-sign

For unlimited use of the instrument within the directives for electromagnetic compatibility 89/336/EC frequency input wires have to be used with shielded cable and cable's shield connected to earth ground at one end only.

# Connection diagram, programming, remarks

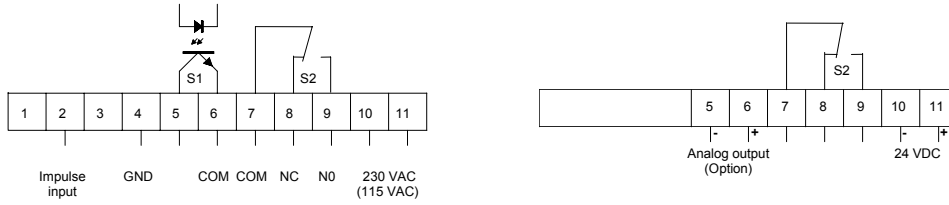

Connections for Namur and 3-wire NPN and PNP see last page. (externally 24 VDC necessary)

## Setting

1. Connect the instrument according to the wiring diagram.
2. After power on, the instruments runs into a lamp test and returns back to the standard mode.
3. Connect the desired input frequency to the measuring input.
4. Pressing the **P**-key enters the program mode with indication of „P1“ on the display.
5. Pressing the **P** and **▲** key simultaneously steps through the different program numbers.
6. Pressing **▲** or **▼** key shows the current values.
7. To change values use **▲** or **▼** key.
8. Otherwise the remaining values will be memorized automatically 7 seconds after the last touch of key with leaving program mode.

## Additional key-functions in standard mode for indication of min/max values.

Simultaneously pressing of **▼** and **▲** key deletes and actualizes min/max-memory.  
**▲** key enters max-memory.  
**▼** key enters min-memory.


## Instructions

After power on the instrument with the inbuilt microcontroller starts with an initial program activating lamp test and readout of memorized parameters in an EEPROM. In case of loosing parameters or any defects in hardware the system generates an error message „HELP“. This function prevents damage from the peripherals and human life, totally reset is required. After a new power on, the system remains in lamp test while pressing **P**-key. Then the unit storages the default parameters and is ready for a new programming.


## Setpoints

The following diagrams are showing the switching operation of PFE4 relay contacts and open collector outputs, the hysteresis is free programmable. There are two kinds of operation:

**Example: operation current**

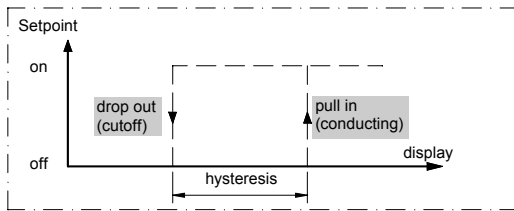

**Example: quiescent current**

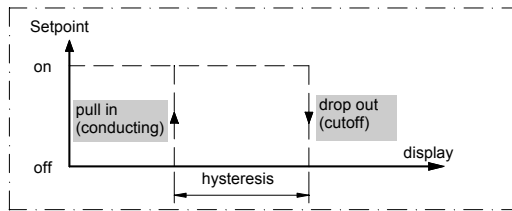


Operation current means that the open collector will be pulled in (conducting) if reaching the adjusted setpoint.

Quiescent current means that the open collector will be dropped out (cutoff) if reaching the adjusted setpoint.



# Example for programming


To memorized value with ▼ or ▲.



Set the free scalable input frequency in kHz. Decimal point unconsidered



To program number 4 with P and ▲.




To memorized value with ▼ or ▲.




Set decimal point




To program number 8 with P and ▲.



To memorized value with ▼ or ▲.




Set display time



The following programming steps are necessary for setpoint programming of S1 and S2 only.


To program number 61 with P and ▲.



To memorized value with ▼ or ▲.




Free scalable value of setpoint S1.



To program number 62 with P and ▲.




To memorized value with ▼ or ▲.




Set hysteresis of S1.




To program number 63 with P and ▲.




To memorized value with ▼ or ▲.



Set quiescent current.



To program number 66 with P and ▲.



To memorized value with ▼ or ▲.




Free scalable value of setpoint S2.



Zur Programmnummer 67 mit P und ▲.




To memorized value with ▼ or ▲.




Set hysteresis of S2



To program number 68 with P and ▲.



To memorized value with ▼ or ▲.




**Programming finished.**


All programmed values will be memorized after 7 s. Jumps back into standard mode automatically.

The program numbers 5 and 6 are available with option analogue output only.


To program number 5 with P and ▲.




To memorized value with ▼ or ▲.




Set free scalable final indication value for analog output.



To program number 6 with P and ▲.



To memorized value with ▼ or ▲.



**Programming finished.**

All programmed values will be memorized after 7 seconds. Jumps back into standard mode automatically.

Setting possibilities of the jumper field on the rear side.

