

Temperature metering thermocouple

- Microprocessor technology
- Standard: 2 setpoints, min/max memory
- Mounting into panels with thickness up to 50 mm optional analogue output



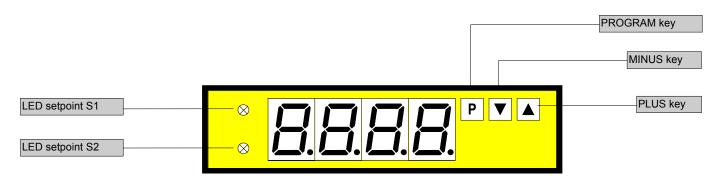

ORDER NUMBER OF TYPE PTE 4.40x.3532B

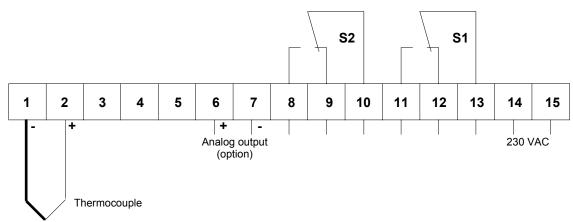

Power supply 115 VAC (connection via terminal 14 and 15)

PTE 4.40x.3422B

(connection via terminar 14 and 15)

Power supply 24 VDC PTE 4.40x.3722B

- galvanic insulated - (15= plus, 14= minus)

PTE 4.4x <u>L</u> .3xx2B	FeCuNi (DIN)	-100 up to + 900°C
PTE 4.4x <u>J</u> .3xx2B	FeCuNI (americ.)	-200 up to + 1200°C
PTE 4.4x K .3xx2B	NiCrNi	-250 up to + 1350°C

Type "X" includes all above thermocouples

Options


- green LED
- Protection IP54
- Analog output 0-10 VDC (12 bit)
- Analog output 0-20 mA/load 500 Ω (12 bit)
- Analog output 4-20 mA/load 500 Ω (12 bit)
- Analog output 0-10 VDC (12 bit)

(supply voltage 24 VDC galvanic insulated)

- Analog output 0-20 mA/load 500 Ω (12 bit) (supply voltage 24 VDC galvanic insulated)
- Analog output 4-20 mA/load 500 Ω (12 bit) (supply voltage 24 VDC galvanic insulated)
- Other power supplies on demand

Technical data


96 x 24 x 131 mm, including screw terminal $92.0^{+0.8}$ x $22.0^{+0.6}$ mm **Dimensions** Housing Assembly cut out Fastening special quick plastic clamp proper to fix in wall thickness up to 50 mm Housing material PC/ABS blend, colour black, UL94V-0 Protective system at the front IP40 connection IP00 Weight approx. 0.290 kg Connection at the rear side via screw terminals up to 2.5 mm² -100 up to + 900°C -200 up to + 1200°C L Fe-CuNi (DIN) Input J Fe-CuNi (americ.) K NiCr-Ni -250 up to + 1350°C Output Relay output charge 240 VAC/0.25 A - 24 VDC/1 A, with ohm resistive burden 2 * 10⁵ at max. contact rating Switching cycles 10 * 10⁶ mechanically 0-10 VDC (12 bit) Analogue output The analogue output is galvanic insulated from the 0-20 mA (12 bit) - load 500 Ohm measuring input! 4-20 mA (12 bit) - load 500 Ohm Resolution **Accuracy** Measuring fault 1°C, +/-1 Digit Temp. drift 100 ppm/K voltage/frequency converter Measuring principle Power unit Supply voltage 230/115 VAC +/- 10 % (50-60 Hz), 24 VDC +/-10 % galvanic insulated Power consumption approx. 5 VA Indication LED with 7 segments, 14 mm high, red Display 4-digit = display 9999 indication of 4 transversal bars Overflow Indication time from 0.2 up to 10.0 seconds adjustable **Ambient** Working temperature 0 up to + 60 °C conditions Storing temperature -20 up to + 80 °C Housing:

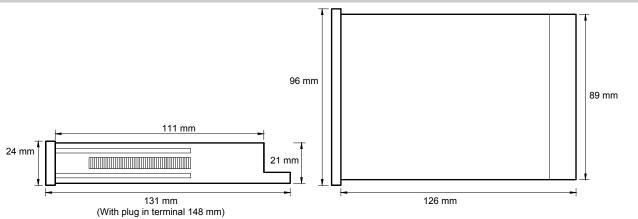

CE-sign

For unlimited use of the instrument within the directives for electromagnetic compatibility 89/336/EC measuring wires have to be used with shielded cable and cable's shield connected to earth ground at one end only.

Connection diagram, programming, remarks

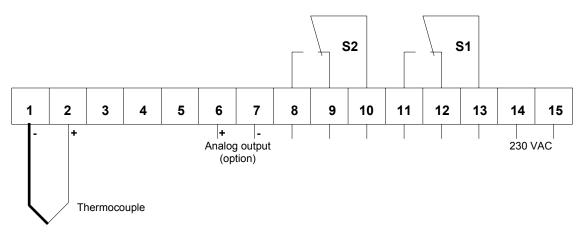

Setting

- 1. Connect the instrument according to the wiring diagram.
- 2. After power on, the instrument runs into a lamp test and returns back to the standard mode.
- 3. Pressing the P-key enters the program mode with indication of P2 in the display.
- 4. Pressing the P-key and ▲-key simultaneously steps through the different program numbers.
- Pressing ▲ or ▼-key shows the current values.
- To change values use ▲ or ▼-key.
- 7. The remaining values will be memorized automatically 7 seconds after the last touch of key with leaving program mode.

Additional key-functions in standard mode for indication of min/max values.

Simultaneously pressing of \blacktriangledown and \blacktriangle key deletes and actualizes min/max-memory.


- ▲ key enters max-memory.
- ▼ key enters min-memory.

Instructions


After power on the instrument with his inbuilt microcontroller starts with an initial program activating lamp test and readout of memorized parameters in an EEPROM.

The following diagrams are showing the switching operation of PVE4 relay contacts. The hysteresis is free programmable. There are two kinds of operation:

Example: operation current

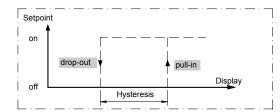

Example: quiescent current

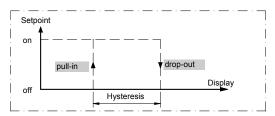

Operation current means that the relay will be pulled in if reaching the adjusted setpoint.

Quiescent current means that the relay will be dropped out if reaching the adjusted setpoint.

Operation, setting instructions

Subject to technical alteration - status 05/2006 - PTE4TX3GB.DOC

Program table 1

Program Number (PN)	Function	Remark	Display	Basic parameter after reset
2	Sensor and line balancing	Temperature is displayed	0 up to +/-20	0
3	Selection of thermocouple	L Fe-CuNi (DIN) J Fe-CuNi (americ.) K NiCr-Ni	1 (°C) – 11 (°F) 2 (°C) – 12 (°F) 3 (°C) – 13 (°F)	2
4	Input of display time	Display time = measuring time Method of measurement integrating	0.2 up to 10.0 seconds	1.0
5	Input of final value for analog output	Option	-999 up to +9999	500
6	Input of offset for analog output	Option	-999 up to +9999	0

Program table 2

(setpoints)

S 1	S2	Function	Display	Basic parameter after reset
PN	PN			
61	66	Setpoint	-999 up to +9999	100/150
62	67	Hysteresis	0 up to +9999	1/1
63	68	Quiescent current	0	-
		Operating current	1	1/1

Example for programming

Temperature sensor: Thermocouple L (FeCuNi)

Connection: 2-wire

-100 up to +900°C (ex works) Display:

Display time: 2.0 seconds

S1 ==> Setpoints: 60 and quiescent current

relay pull in = 58 ==> hysteresis 2

S2 ==> 150 and operating current

relay drop out = 80 ==> hysteresis 70

Analog output: 0 V output display 0 0°C

600°C 10 V output display 600

Program key P


MINUS key ▼

PLUS key ▲

The basic adjustments concerning to the following program example are the ground parameters after a total reset occuring through a power on with pressing P-key (see previous page).

Program advices:


Pressing the P-key enters always the program mode with program number 2. The P2 starts to blink in change with the current value after 3 seconds. Further 4 seconds, the system leaves the program mode and goes to the standard mode. In program mode pressing ▼ or ▲ -key selects the current values which are free scalable with both of the keys. All the other parameters will be memorized automatically after leaving program mode.

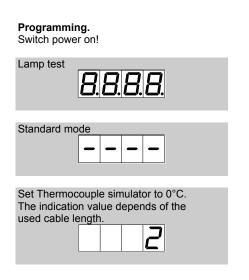

To program number 2 with P.
To memorized value with ♥ or ♠.
Sensor and line balancing.
To program number 3 with P and A P A

To memorized value with ▼ or ▲.
Set thermocouple L.
To program number 4 with P and A P
To memorized value with ▼ or ▲.

Example for programming

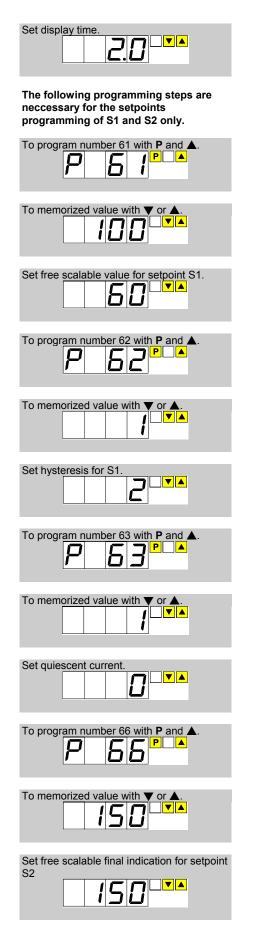

To program number 67 with P and A.
To memorized value with ▼ or ▲.
Set hysteresis for S2.
To program number 68 with P and A.
To memorized value with ▼ or ▲.
Set operating current.
Programming finished. All programmed values are memorized after 7 seconds. Jumps back into standard mode automatically.
The program numbers 5 and 6 are available with option analogue output only.
available with option analogue output
available with option analogue output only. To program number 5 with P and ▲.
available with option analogue output only. To program number 5 with P and A. P
available with option analogue output only. To program number 5 with P and ▲. P To memorized value with ▼ or ▲. Set free scalable final indication value for analog output.

Programming finished.

All programmed values are memorized after 7 seconds. Jumps back into standard mode automatically.

Setting possibilities of the jumper field on the rear side.

